

CONQUER RACE TRUGGY 1:16



GANTRY Cross-Country Truck 1:16



NAVODILA ZA UPORABO

 
DALJINSKI UPRAVLJALNIK



1. VKLOP/IZKLOP
2. VOLAN
3. ROČICA ZA PLIN
4. NASTAVITEV HITROSTI
5. LED LUČKA
6. NASTAVITEV ŠPURE
7. NASTAVITEV HITROSTI (30%-100%)
8. OBRNJENE SMERI VOLANA
9. NIMA FUNKCIJE
10. NIMA FUNKCIJE

1. Power Button
2. Steering Wheel
3. Throttle Trigger
4. Throttle Trim
5. Status LED
6. Steering Trim
7. Max. Speed (30% - 100%)
8. Steering Reverse
9. No Function
10. No Function

VSTAVLJANJE BATERIJ

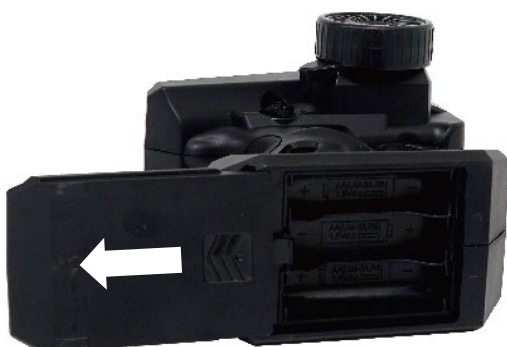

VSTAVITE 3 x AA 1,5V BATERIJE V DALJINSKI UPRAVLJALNIK. NE UPORABLJAJTE POLNILNIH BATERIJ! V PRIMERU, DA DALJ ČASA NE UPORABLJATE DALJINCA, ODSTRANITE BATERIJE.

Insert three AA batteries into the transmitter. Pay attention to the polarity.
If you do not use the remote control for a longer period, remove the batteries to prevent leakage.

 
UPORABA VOZILA

VKLOP DALJINSKEGA UPRAVLJALNIKA



STIKALO POTISNITE V LEVO NA "ON" IN DALJINEC SE BO VKLJUČIL.


Slide the switch to the "ON" position to switch on the remote control.

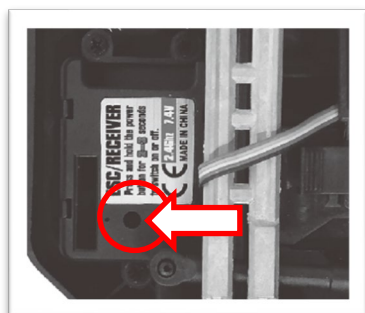

PRITISNITE STIKALO NA ESC-ju, DA PRIČNE RDEČA LED LUČKA UTRIPATI. ČE LED LUČKA GORI NEPRETRGOMA POMENI DA STA DALJINEC IN AVTO POVEZANA.

Press and hold the button on the ESC for 2-3 seconds to switch it on.

 
ROČKA ZA PLIN NA DALJINCU

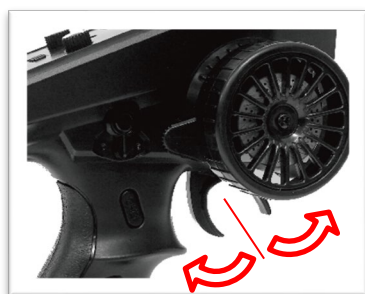

KADAR POTEGNETE ROČKO ZA PLIN K SEBI, BO AVTO VOZIL NAPREJ. BOLJ KO POTEGNETE HITREJE GRE VOZILLO. ČE MED VOŽNJO POTISNETE ROČKO NAPREJ (OD SEBE), BO AVTO ZAVIRAL. ČE SPUSTITE ROČKO IN PONOVRNO POTISNETE STRAN OD SEBE, BO AVTO VOZIL VZVRATNO.

When you pull the throttle trigger, your car accelerates forward. When you push the throttle trigger, the car brakes. When you release the trigger then push again, the car drives backward.

 
NASTAVITEV SPURE

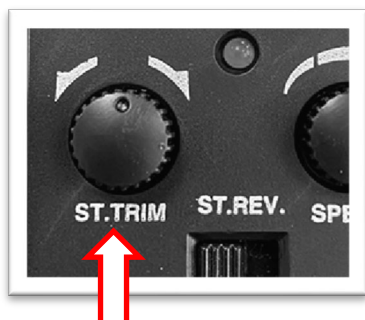

ČE AVTO SAM OD SEBE NE VOZI NARAVNOST, TO NASTAVITE Z GUMBOM "ST. TRIM". OBRNITE GA V LEVO ALI DESNO, DA NASTAVITE ŠPURO.

If the vehicle does not drive straight, you can correct the wheel position with "ST.TRIM". Turn the potentiometer to straighten the wheels.

 NASTAVITEV MAX. HITROSTI

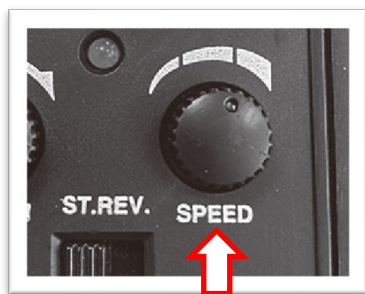

Z GUMBOM "SPEED" LAHKO NASTAVITE MAX. HITROST VOZILA. ČE GUMB OBRNETE DO KONCA V LEVO, BO HITROST VOZILA 30-40% MAX. HITROSTI. GUMB DO KONCA V DESNO PA POMENI 100% HITROST VOZILA.

The maximum speed can be set via the "SPEED" potentiometer. Turn the knob to the left, the vehicle travels approx. 30-40% of the maximum speed. Turn the knob to the right, the maximum speed is 100%.

SMER VOLANA



ČE VOLAN OBRNETE V LEVO, BO VOZILO ZAVIJALO V LEVO IN OBRATNO. LAHKO PA ZAMENJATE SMERI VOLANA, TAKO DA PREMAKNETE GUMB V LEVO IN KO BOSTE VOLAN ZAVRTELI V LEVO, BO VOZILO ZAVIJALO V DESNO.

If you turn the steering wheel to the left and the vehicle steers to the right, you can toggle the "ST.REV:" switch to reverse the direction of rotation of the servo.

IZKLOP VOZILA IN DALJINSKEGA UPRAVLJALNIKA

KO PRENEHATE UPORABLJATI VOZILO, MORATE OBVEZNO NAJPREJ IZKLJUČITI VOZILO IN NATO DALJINSKI UPRAVLJALNIK. GUMB NA ESC-JU DRŽITE 2-3 SEKUNDE IN ESC SE BO IZKLJUČIL. NA DALJINCU PREMAKNITE GUMB ZA VKLOP / IZKLOP NA "OFF" IN DALJINEC SE BO IZKLJUČIL. BATERIJO VOZILA VEDNO ODKLOPITE OD SPREJEMNIKA, KADAR VOZILO NE UPORABLJATE.

 
 
When you are finished using the vehicle, be sure to turn off the vehicle first and then the remote control. To do this, press the button on the ESC for 2-3 seconds. Then slide the switch on the remote control to "OFF". Be sure to disconnect the battery from the ESC when not using the vehicle.

VZDRZEVANJE VOZILA

- PRED VOŽNJO VEDNO PREVERITE, DA SO VSI VIJAKI TRDNO PRIVITI - PREDVSEM MOTORNI VIJAKI.
- PREVERITE STANJE BATERIJ V DALJINCU
- SČASOMA SE NA ŠASIJI IN VOLANSKEM SISTEMU NABERE UMAZANIJA. ODSTRANITE JIH Z MEHKO ŠČETKO ALI ZRAKOM POD PRITISKOM.
- PREVERITE AMORTIZERJE IN VOLANSKI SISTEM.
- PREVERITE ELEKTRONIKO.
- REDNO PREVERJAJTE SPOJE MED PLATIŠČI IN GUMAMI.

- Überprüfen Sie die Elektronik auf Schäden. Dazu gehören das Lenkservo, der Regler/Empfänger, der Motor und die Verkabelung.
- Prüfen Sie regelmäßig die Verklebung zwischen Reifen und Felgen. Wenn Sie eine Reifenablösung feststellen, kleben Sie den Reifen mit einem hochwertigen Reifenkleber neu auf die Felge.
- Before each journey, check the vehicle for loose screws, especially the engine mounting screws. Tighten them if necessary.
- All screws that are screwed directly into metal should be secured with thread locker. This will prevent screws from coming loose while driving. Screws that are screwed into plastic or composite material do not need to be secured.
- Check the transmitter batteries before each ride.
- Over time, a lot of dirt will accumulate on the chassis. These should be removed with a soft brush and compressed air.
- Check the suspension and steering system to make sure both are working smoothly.
- Check the electronics for signs of damage. This includes the steering servo, esc/receiver, motor, and wiring.
- Periodically check the bonding between the tires and rims. If you notice any tire separation, re-glue the tire to the rim using a high-quality tire adhesive.

POLNJENJE BATERIJE VOZILA

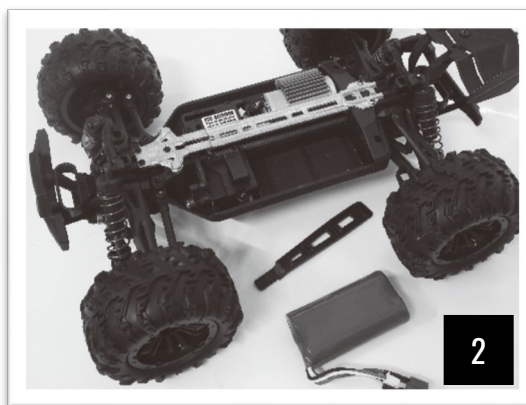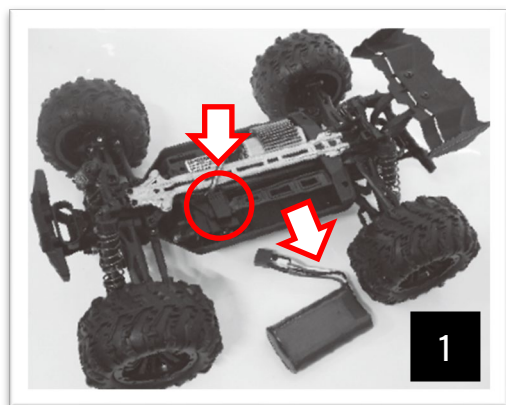

- VEDNO ODSTRANITE BATERIJO IZ VOZILA, KADAR JO POLNETE.
- VEDNO POLNITE BATERIJO POD NADZOROM.
- POLNITE JO V PROSTORU IN NA POVRŠINI, KI JE ZAŠČITENA PRED VROČINO IN VLAGO.
- NIKOLI NA PUSTITE BATERIJE PRIKLJUČENE NA POLNILEC ČEZ NOČ!
- OTROCI NE SMEJO POLNITI BATERIJE BREZ NADZORA ODRASLE OSEBE.

- Please remove the battery from the vehicle before charging it.
- To do this, press down on the tab circled in Fig. 1. Remove the battery cover and take out the battery.
- Children must NOT charge the battery without adult supervision.
- Charging must be done in a safe and spacious area that is protected from heat and moisture.
- Never charge the battery unattended or overnight.



An eine USB-Buchse am PC oder Smartphone Ladenetzteil anschließen.

Connect to a USB socket on the PC or smartphone charger.



- POVEŽITE BELO STIKALO NA BATERIJI Z USB POLNILEM, USB POLNILEC PRIKLJUČITE NA USB VTIČNICO NA RAČUNALNIKU ALI POLNILCU ZA MOBILNE TELEFONE.
- ČAS POLNJENJA BATERIJE ZANAŠA OKOLI 3-4URE NA RAČUNALNIKU IN 2-3URE NA POLNILCU ZA MOBILNE TELEFONE.
- MED POLNENJEM GORI RDEČA LUČKA NA POLNILCU, ZELENA PA UTRIPA. KO RDEČA UGASNE, ZELENA PA GORI NEPRETRGOMA, JE POLNENJE ZAKLJUČENO.

- Connect the battery with the white balance plug to the socket on the USB charging cable. Then connect the USB plug to a USB socket on the PC or a smartphone charger (5V 2A).
- Charging time is about 3.5 - 4 hours on a PC, and about 2.5 - 3 hours on a USB power supply (5V 2A).
- During the charging process, the red LED on the USB plug is permanently lit, and the green LED is glowing. Once charging is complete, the green LED will be on continuously and the red LED will be off.

OPOZORILA ZA BATERIJO VOZILA

- PRED UPORABO VOZILA, VEDNO NAPOLNITE BATERIJO.
- TAKOJ KO OPAZITE, DA VOZILO VOZI POČASNEJE, USTAVITE VOZILO IN NAPOLNITE ALI ZAMENJAJTE BATERIJO. PRED POLNENJEM OHLADITE BATERIJO.
- ČE DALJ ČASA NE UPORABLJATE VOZILA IN BATERIJE, SVETUJEMO, DA NAPOLNETE BATERIJO DO 50% IN JO SHRANITE NA SUHEM IN TOPLEM MESTU. NIKOLI JE NE PUSTITE PRIKLJUČENE NA VOZILO ALI POLNILEC.

- Please fully charge the battery before each use.
- - As soon as you notice that the vehicle slows down, the vehicle should be stopped as quickly as possible to charge the battery. Allow the battery to cool down before charging.
- - If you do not use the vehicle for a longer period, we recommend charging the battery to approx. 50%. To do this, only charge for approx. half the charging time (1.5-2 hours on the PC and 1-1.5 hours smartphone power supply with 2A).